

Programming instructions

The Braketext remote control is used to program messages of your choice into locations 1 to 5.

Each program has a maximum of 250 characters, and the remote control provides the option for having the scrolling message facility on or off (brake function will always be operable regardless of remote setting).

To program:

Press **EDIT** – select program number – enter your message – press **ENT** to store/run new message.

To select an alternative program:

Select **RUN** – enter program number (1 – 5) – **ENT**.

Note:

SHT function allows access to the alternative characters for each button.

CAP turns capitalised letters on/off.

INV inverts text orientation.

CLR clears entire program - **Y** (yes) or **N** (no) required to confirm.

Use the **SPD** button to adjust message-scrolling speed at any time.