

Troubleshooting

Q - I have fitted the Braketext unit, but I cannot make any changes with the remote control?

A - have you fitted the 2 AAA batteries?

Q - I have made all the connections as described but the unit does not work?

A - check that the positive feeds to your unit are live – if they are, the problem may be a poor earth connection. Make sure that you have a good contact with the vehicle frame and that it is not insulated with paint etc. if all else fails, remove the unit and test by placing the black wire on the negative side of a 12 volt battery and the green wire on the positive. If all of the LED illuminate, the Braketext is working correctly.

We hope you have found the information provided to be useful. Do remember we are really interested in receiving any feedback or suggestions from you - especially if you can provide us with photographs etc.

Please email your feedback and comments to feedback@audicator.com